



DESIGNED TO MOVE [YOU]®

# JWM70A

## QUICK REFERENCE GUIDE

Basic Operation

**POWER/MODE:** Push to turn ON or OFF.

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease the active zone's volume.

**BACK:** Press to exit any menu.

**RESET:** Use a ball point pen or thin metal object to press the reset button.

**ZONES:** Press ZONES button to enter the Zone Menu and select the active-zone (ZONE A, ZONE B, and ZONE C) for volume adjustment control.  
**ZONE MUTE:** While in Zone Menu, Press and hold the ENTER knob to quickly mute the zone.

**AUX IN:** Insert 3.5mm cable from your portable media device.

**MODE:** Press to cycle through source mode. Press ENTER KNOB to select. Radio will auto-select after a couple seconds of inactivity.



**SETTINGS:** Press to bring up AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), Fade (front to rear), LOUDNESS (on/off), EQ: User, Flat, Pop, Classic, Rock.

Press & Hold to bring up SETTING MENU options: BLUETOOTH (ON/OFF), BEEP (ON/OFF), TUNING REGION, PRESET VOLUME and RESET. VOLUME KNOB will adjust each MENU option except for 'RESET'.



App Control

**App download and operation:** jControl app controls all of the primary functions of the JWM70A directly from your phone or table. It can be downloaded from the App Store on iTunes for Apple devices, or the Google Play Store for Android devices, and found by searching for jControl. After downloading and installing the app, pair your device to the JWM70A as instructed in the Bluetooth Operation section in this guide. Once your device is paired, open the app and use as instructed. (Device must be paired to JWM70A before the app can be used).

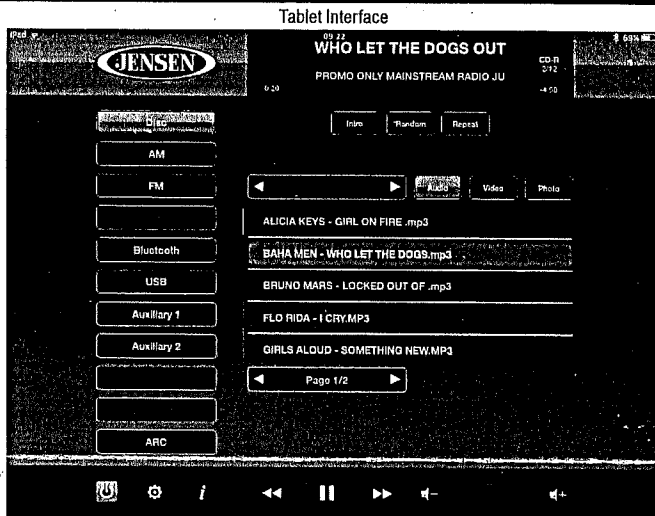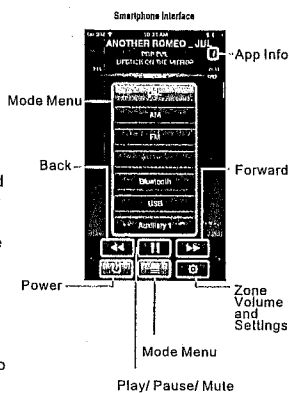

AM/FM Tuner Controls

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease the active zone's volume.

**BACK:** Press to exit PRESET menu.

**TUNE/SEEK/TRACK:** Press ►► button to tune frequency higher. Press ◄◄ button to tune frequency lower. Press and hold to scan to next strongest station.



**STATION STORE PRESETS:**  
1. Press PRESET button to bring up PRESET menu.  
2. Press & Hold the ENTER KNOB store current station.  
NOTE: Up to 18 FM & 12 AM channels can be stored.

**MODE:** Press repeatedly to cycle through available modes until Radio is reached, and press ENTER KNOB to select. Rotate knob to desired band and press ENTER KNOB to select.


**PRESETS MENU:** Press to bring up PRESET menu. Press repeatedly to cycle through the stored channels. Press ENTER KNOB to recall stored channel.

**AS/PS:** Press to SCAN through currently stored presets. Press & Hold to STORED strongest broadcast stations in your area.

CD/DVD Player Controls

**PLAYBACK MENU:** Press to bring up PLAYBACK MENU options: RANDOM (on/off), REPEAT (one/dir/all/off), INTRO (on/off) for CD/MP3 playback. TITLE menu, REPEAT (title/all/off) for DVD playback. Rotate VOLUME KNOB will adjust each playback menu option. Press ◄◄ or ►► to navigate menu options.

**BACK:** Press to exit playback menu.

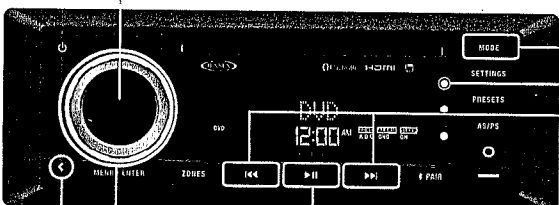

►►: Press to PLAY or PAUSE current audio or video.  
**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease the active zone's volume.

**MODE:** Press repeatedly to cycle through available modes until Disc is reached, and press ENTER KNOB to select.

**EJECT:** Press to eject the disc select.

**TUNE/SEEK/TRACK:** Press ►► button to advance to NEXT TRACK or CHAPTER/TITLE. Press ◄◄ button to go back to PREVIOUS TRACK or CHAPTER/TITLE. In CD mode, press & hold to FAST FORWARD or REVERSE current play. In DVD mode, press & hold to enter FAST FORWARD/REVERSE. Press & Hold additional times to step through x2, x4, x8, x20. Press PLAY (►►) to resume.

**Bluetooth Operation**

**TUNE/SEEK/TRACK:**  
Advance or reverse tracks on your device.

**▶|| :** Press to **PLAY** or **PAUSE** current audio or video.

**ANSWERING PHONE:** BT audio will automatically pause when a call is answered. It will then resume once call has ended. In some cases, it may be necessary to press the play button to resume the BT audio.



**MODE:** Press repeatedly to cycle through available modes until Bluetooth is reached, and press **ENTER KNOB** to select.

**SETTINGS:** Press & Hold to bring up setting menu and press to navigate through menu options, until BT menu is reached Press **ENTER** to select **DEVICE LIST** or **PAIR**.

**PAIR DEVICE VIA BLUETOOTH:** Make sure the device you intend to pair with is on and ready to pair.  
1. Press **PAIR** button to enter Bluetooth mode.  
2. Press & Hold **PAIR** button to start Bluetooth pairing process.  
The JWM70A will display "PAIRING" and will be available to pair for 120 seconds.  
3. In your device Bluetooth settings, select "JWM70A" to connect.

**USB Playback**

**PLAYBACK MENU:** Press to bring up **PLAYBACK MENU** options: **RANDOM** (on/off), **REPEAT** (one/dir/all/off), **INTRO** (on/off) and **FOLDER/FILE** select. Rotate **VOLUME KNOB** will adjust each playback menu option. Press **◀** or **▶** to navigate menu options.

**BACK:** Press to exit playback menu.

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease corresponding zones volume.



**MODE:** Press repeatedly to cycle through available modes until USB is reached, and press **ENTER KNOB** to select.

**PLAY/PAUSE:** Press to **PLAY** or **PAUSE** current audio or video.

**USB:** Connect a USB flash/thumb drive for audio playback or mobile device for charging.

**TUNE/SEEK/TRACK:** Press **▶** button to advance to **NEXT TRACK**. Press **◀** button to advance to **PREVIOUS TRACK**. Press & Hold additional times to step through x2, x4, x8, x20. Press **PLAY (▶||)** to resume.

**Clock with Alarm**

**BACK:** Press to exit time menu.

**SLEEP TIMER /ALARM/CLOCK SET:** Repeated presses will cycle through the **TIME** menu setting options: **SLEEP** timer (OFF, 15, 30, 45, 60 minutes), **ALARM** (on/off), **ALARM SET**, **CLOCK SET**. Rotate the **VOLUME KNOB** to adjust hour or minute when setting either **CLOCK** or **ALARM** time. Press **ENTER KNOB** to change to minute adjustment.



**DIMMER:** Press to switch the **DIMMER** (on/off). Press & Hold to bring up brightness setting. Rotate the **VOLUME KNOB** to adjust the brightness (Off, 1, 2, 3, 4, 5, 6, 7, 8).

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides>.