
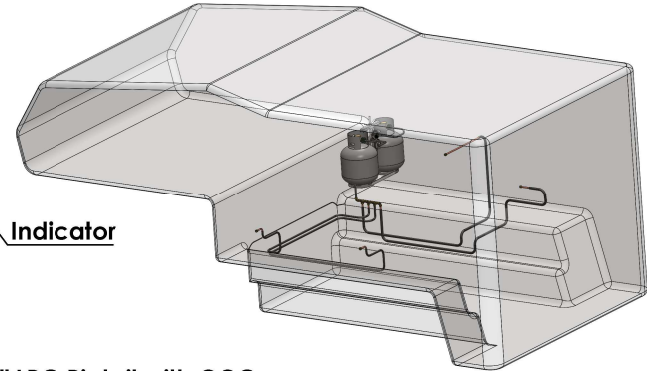


Note: The Auto change Over
 When one of the tank empties, the Regulator will internally select the other bottle
 The indicator will not flip to the new bottle and will remain with the indicator showing Empty, while the lever is pointing to the bottle that is empty.

The regulator in this state will deliver 70% of it's rating. (70% of 262,500 Btu/Hr.)
 Which is in excess of the total camper demand.
 When the lever is flipped to the tank now in use, the indicator will return back to a good or green state on the indicator. Indicating that the bottle to which the lever is pointing has gas.

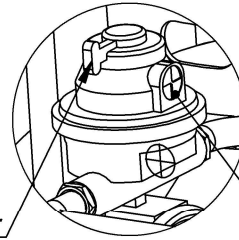

Selection Lever

Indicator

Auto Changeover Regulator

Wingnut Retainer

Bottle Clamp

18" LPG Pigtail with CCG

20lbs LPG Tank w/OPD

18" LPG Pigtail with CCG

20lbs LPG Tank w/OPD

Note: Code allows for your 2 x 20lb LPG Bottles
 to be filled to 80% of capacity. The Overfill Prevention Device (OPD) prevents overfilling. This means the maximum your system will contain is just over 768,000 Btu's of fuel. The Btu's listed for each appliance are the hourly consumption at full operation.

Note: The LPG Bottles are mounted on a Tray that slides.
 Ensure that the bottles are secured to the tray using the clamp and wingnut. And that the tray is secured to prevent it from sliding open.

Water Heater
 12,000 Btu

Furnace
 19,000 Btu

20lbs LPG Tank

Range
 29,100 Btu

LPG Bottle Tray

Fridge
 1,500 Btu

Title: Northern Lite Camper Typical LPG System		
Company: Northern Lite Manufacturing	Reference #: Owners Manual	Rev #: 1
Drawing by: B. Paracholski	Verified by:	
Page Size: A	2021 November 07	Sheet: 1